

AIRMATE

SUBMITTAL DRAWING

- ALL ALUMINUM CONSTRUCTION, PERFECT FOR MRI APPLICATIONS
- •FITS STANDARD 24" X 24" T-BAR CEILING SYSTEMS
- AVAILABLE IN 6,8,10,12,14, INCH FIXED COLLAR SIZES
- REMOVABLE FACE PLATE
- 360° PATTERN DELIVERY
- WHITE (W) ENAMEL • FINISH:

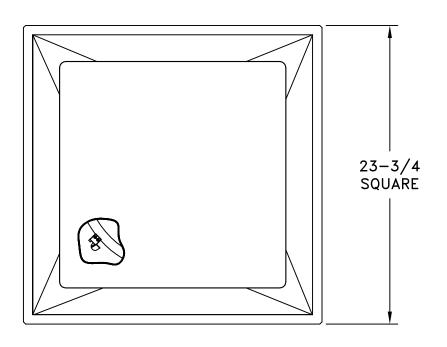


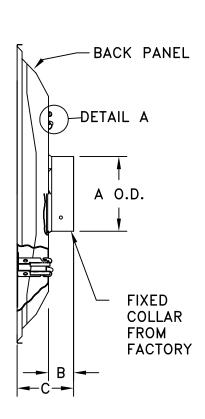



REMOVING FACE PLATE:

1. PUSH THE FACE PLATE TOWARDS THE BACK PANEL. THIS WILL DISENGAGE THE HOOKS FROM THE BACKSIDE PANEL SLOTS (DETAIL A).

2. ROTATE THE FACE PLATE COUNTER—CLOCKWISE AND PULL PLATE AWAY FROM BACK PANEL AND HOOKS THRU THE SLOTS.



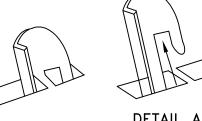

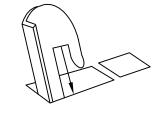

DETAIL A

JOB NAME:	SUBMITTED BY:	DATE: 05/14/2014 AM-A1300FP
LOCATION:		A1300FP
ARCHITECT:		Aluminum Lay—in Diffuser Detachable Face Plate
ENGINEER:		Delachable race ridle
CONTRACTOR:		